



Welcome

Archon Jump Wireless Skipping Rope enhances the fun of skipping. You can set daily target, share your skipping record with your friends and create competitions with your friends.

 
Archon Jump Wireless Skipping Ropes can synchronize wirelessly with your mobile phone.

Compatible with Android (4.3 or above) IOS 6.X, 7.x system iPhone 4S or above.

Package includes:

- | | |
|-------------------------------------|-----------------------------------|
| Handle x 2 | Long Skipping Rope Attachment x 1 |
| Short Skipping Rope Attachments x 2 | Pouch x 1 |
| AAA Battery x 2 | User Manual |

Knowing your Archon Jump Wireless Skipping Rope

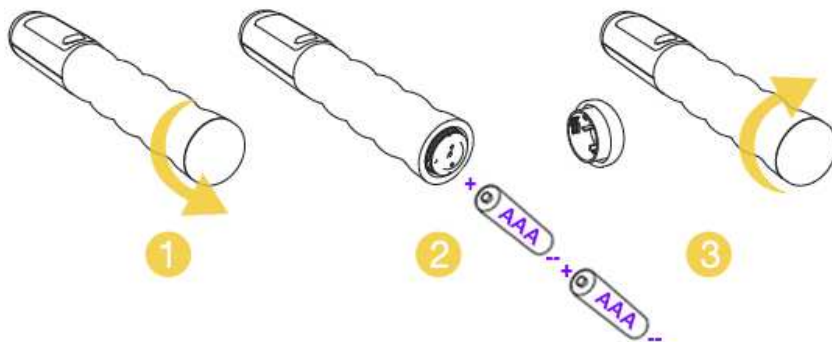


1.1 Battery Installation


- Remove battery cover.
- Insert 2 x AAA batteries.
- Close the battery cover and listen for a beep sound.

1.2 Skipping Rope

 - Adjust the rope to a length that suits your height. A rope of the right length can be swung over your head and under your feet smoothly.
- Stand on the middle of the rope and lift both ends of it. The ends of the rope should reach your chest, (or slightly lower) palm up (see illustration).

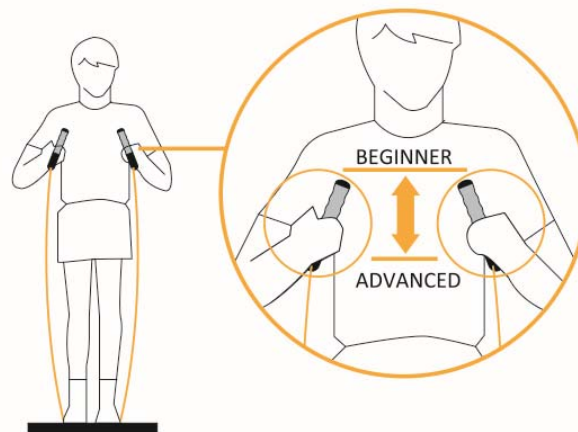

 
- Adjust your rope length and simply fasten the skipping rope through the two holes on top of the handle.

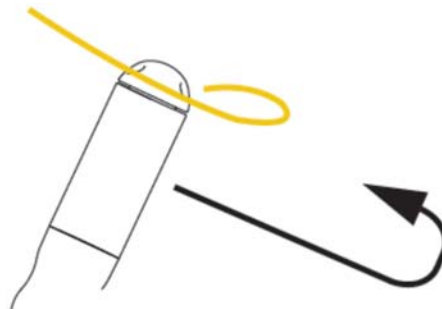

- When in limited space which does not allow for use of the long skipping rope, you can use the short skipping rope attachments and enjoy the fun of skipping in a confined space.



 2. LCD and Handle

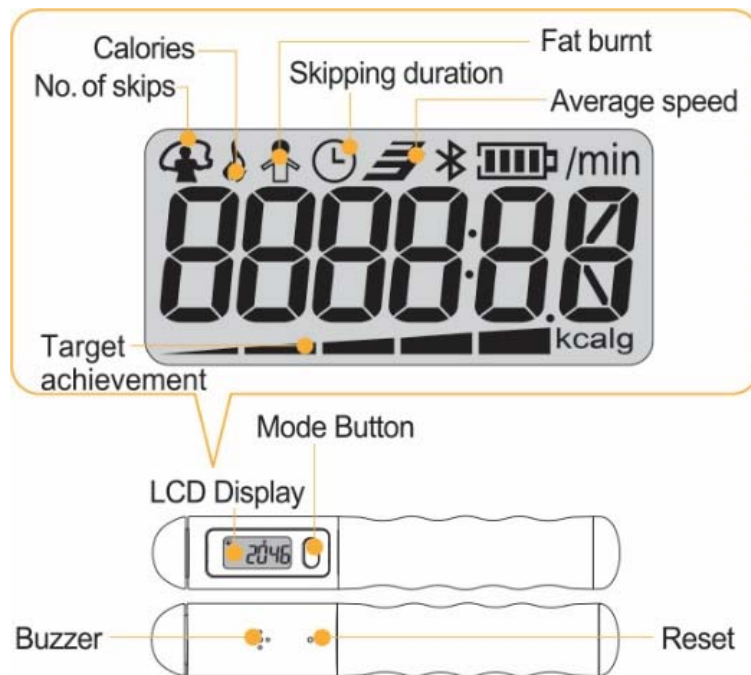

Mode Button: Press to switch between different modes or press and hold to initiate pairing.

Modes



3. Setup Procedure

3.1 Download Archon App

Download Archon App directly from Archon website, Apple Store or Google Play.

www.archon.com.hk

Apple store



Google Play



(Android phone needs to be given permission to access your location and turned on the location, otherwise the device may not be searched.)

3.2 Pairing

- Start Archon app on your mobile phone.
- Sign up if you are a new member or log-in with your existing account.
- Scroll through the instruction pages, fill in your personal information and go to the Add Device menu.
- If your information is not filled in, default setting will be applied.
Default setting of Archon Jump: Gender: Male / Age: 30 / Weight: 60kg
- Select Archon Jump Wireless Skipping Rope.
- Press and hold the [Mode] button on the handle until the icon flashes
- Select the Archon Jump on your mobile phone and initiate pairing.
- If connection is successful, the icon will stop flashing and remain on.



4. Synchronize Mobile Setting with the Archon Jump

- You can set your own daily skipping target in the Archon app and synchronize to your Archon Jump Wireless Skipping Rope. . If your profile is not set, default setting will be applied.
- After paired your Archon Jump with mobile phone, select “Rope Skipping” in the main page.
- To start a skipping session, press “START”. You can select “PAUSE” or “RESUME” your skipping session in the Archon App.
- To end a skipping session, press “END” and your skipping record will be saved.
- **Make sure your mobile phone and Archon Jump stay connected during your skipping session, otherwise, your skipping data will not be saved.**

5. Safety and Care

- Do not use the device in extreme temperatures. Please don't expose the device to strong sunlight or heavily humid environments. Suitable temperature for the device and accessories is -10°C - 50°C.
- Archon Jump is not a toy. Keep all skipping ropes out of the reach of children.
- Keep the Archon Jump Wireless Skipping Rope away from fire or any objects that may cause damage or scratching.
- Please do not attempt to repair, modify or disassemble the Archon Jump.
- For indoor skipping, mind your headroom and keep a reasonable distance from things like wall mounted fans, ceiling fans and furniture.
- If there is more than one skipper, skippers should keep a safe distance from each other to avoid injuries from ropes.
- If feeling exhausted during exercise, stop strenuous activity to prevent muscle and joint injuries.
- If feeling unwell during exercise, please stop immediately and seek medical assistance or professional help.
- This device complies with R&TTE Directive 1999/5/EC.
- Keep batteries out of reach of children.
- Dispose of used batteries properly.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries or batteries of different type (e.g. carbon-zinc and alkaline batteries).
- DO NOT recharge non-rechargeable batteries.

- DO NOT short-circuit the supply terminals.
- Remove batteries if flat and before storing your Archon for an extended period of time.
- Always remove weak, old, or worn-out batteries and recycle or dispose of them in accordance with Local and National disposal regulations.
- Caution: Risk of explosion if replaced by an incorrect battery type. Use and replace only with correct size and type of batteries.

6. Specification

SPECIFICATION	
Model	JR-01
Color	Black
Display	LCD
Battery	AAA x 2
Battery Life for Working	300 – 350 hrs (normal usage)
Operating Temperature	-10°C to 50°C
Rope Length	3 m

7. Frequent Question and Answer

Q: Why connection to the Archon Jump Wireless Skipping Rope has failed?

A: Please check if your mobile phone and operating system fall within the range of compatibility (see point 3). Connection may sometimes fail due to mobile phone operation. Please turn off connection and turn on again. Alternatively, switch the phone on and off again. Retry connection.

8. Warranty

We offer one year warranty service on Archon Jump Wireless Skipping Rope from the date of purchase. Please present product with proof of purchase to us or authorized distributors. For details please refer to the Archon website www.archon.com.hk

9. What is not included in the Limited Warranty?

- Aesthetic damage where it does not affect the operation or safety of the product.
- Repair costs that have not been approved.
- Damage or breakdown due to flood, wind or other severe weather conditions.
- Damage or breakdown due to fire or any natural disaster.
- The cost of repairing or replacing a product which fails because anyone neglects, abuses or misuses the product.
- The cost of repairing or replacing a product which has been exposed to insect infestation (or similar phenomenon), human or animal fluid/matter.
- Software or data.
- Cost of Data Recovery



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

Designed by:
Archon Wellness Limited
www.archon.com.hk / info@archon.com.hk

HONG KONG
www.archon.com.hk / info@archon.com.hk

INTERNATIONAL
www.archonglobal.net / info@archonglobal.net

CHINA
www.archonglobal.cn / info@archonglobal.cn

Made in China
Version: JR-01 V01